

Sense^{IoT} CONFIG

Sense Config is an easy to use tool for fully configuring Omni-ID Sense IoT products.

Specific configurable parameters vary depending on the device being configured but typical examples include:

Device awake/asleep; beacon rates; sensor thresholds; network setting; beacon profiles etc.

The app can be used to configure all other settings such as beacon rates and Sensor thresholds.

For details of specific of configurable parameters please review specific device user guide.

Sense Config is available for both PC and Android platforms and can be downloaded from the following link along with a detailed guide - www.omni-id.com/sense-guides.






		Sense Config PC	Sense Config Android
Sense Locate - Position		✓	✓
Sense Locate - Kinetic		✓	✓
Sense Condition - Alert		✓	✓
Sense Condition - Distance		✓	✓
Sense - SHIELD		✓ Used to set audible alert volume	Not supported



Figure 1: Sense Config PC App Home Screen

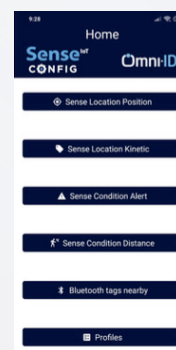


Figure 2: Sense Config Android App home screen